

EN 15267 Certified
U.S. EPA Approved
China EPA Approved
Internationally Approved



Ambient
Air Quality Monitoring

Particulate Monitoring PM_{10} , $PM_{2.5}$ and TSP

Ambient Air Quality Monitoring Particulate Monitoring PM₁₀, PM_{2.5} and TSP

The particulate matter monitor SM200 can be used for both automatic measurement and filter sampling. The SM200 can be equipped with a PM₁₀ head, a PM_{2.5} or a TSP head, designed for either 2.3 m³/h or 1.0 m³/h.

The SM200 is a cost-effective solution for particulate matter monitoring and sampling. It can be completely remote controlled and is ideally suited for use in modern monitoring stations.

The SM200 can generate both 24-hour data based on beta attenuation and real-time data based on particle counting. Due to the extensive automatic QA/QC procedures, the SM200 operates with high accuracy and precision.

The SM200 meets the new regulation for automatic monitoring of PM₁₀ and PM_{2.5}. It also meets the new regulation for particulate matter sampling on filter membranes for further analysis of cadmium, nickel, PAH and other substances.

MONITORING AND SAMPLING

The SM200 provides both automatic monitoring of particulate matter as well as sampling of air on filters. Standard 47 mm filters are used.

INTERNATIONAL APPROVALS

- Approved by TÜV, MCERTS, U.S. EPA, and CNR among others.
- Reference sampler according to EN 12341, when equipped with 2.3 m³/h inlet head.

BETA ATTENUATION

The SM200 is an automatic particulate monitor for monitoring of PM₁₀ and PM_{2.5}. A filter is loaded into the filter magazine and a Geiger counter detects the beta attenuation before and after sampling. The measurement time of the instrument is 8-24 hours.

REAL-TIME PARTICLE MEASUREMENTS

The SM200 can generate real-time data using particle counting. A laser diode based particle counting system is placed before the sampling filter.

The number as well as the size of the particles are measured. The real-time data is calibrated using the results from the beta attenuation measurements.

BUILT-IN CALIBRATION

Span, linearity and zero calibrations are automatically controlled at regular intervals.

TS200 – TEMPERATURE STABILIZED INLET TUBE

The TS200 is used for keeping the sample air at ambient temperature. Since the temperature of the sample is controlled, no factors have to be added to the measurement results. This means that the SM200 always provides accurate results, unaffected by both seasonal and geographical factors. The TS200 is available as an option and has to be ordered separately.

QA/QC PROCEDURES

The 47 mm filters can be weighed according to gravimetric reference methods. The results can be used for quality control of the automatic measurements.

Extensive QA/QC procedures regulate the operation of the SM200 by use of internal sensors such as:

- External temperature
- External pressure
- Filter temperature
- Filter relative humidity
- Filter pressure drop
- Inlet flow rate
- Geiger temperature
- Geiger counts
- Geiger high voltage


SERIAL COMMUNICATION – REMOTE CONTROL

The instrument is equipped with three RS232 serial ports that can be used for connecting the SM200 to a PC, modem or data logger. By using the serial ports, the SM200 can be remotely controlled, which means that data retrieval and other operations can be performed at distance. The SM200 is ideally suited for use in a monitoring network.

For further information, please visit www.opsis.se.

SYSTEM OVERVIEW

SM200 analyser unit equipped with the TS200, which is used for keeping the sample air at ambient temperature. The TS200 includes an inlet tube, ventilation hose, drain hose, fan and flanges.

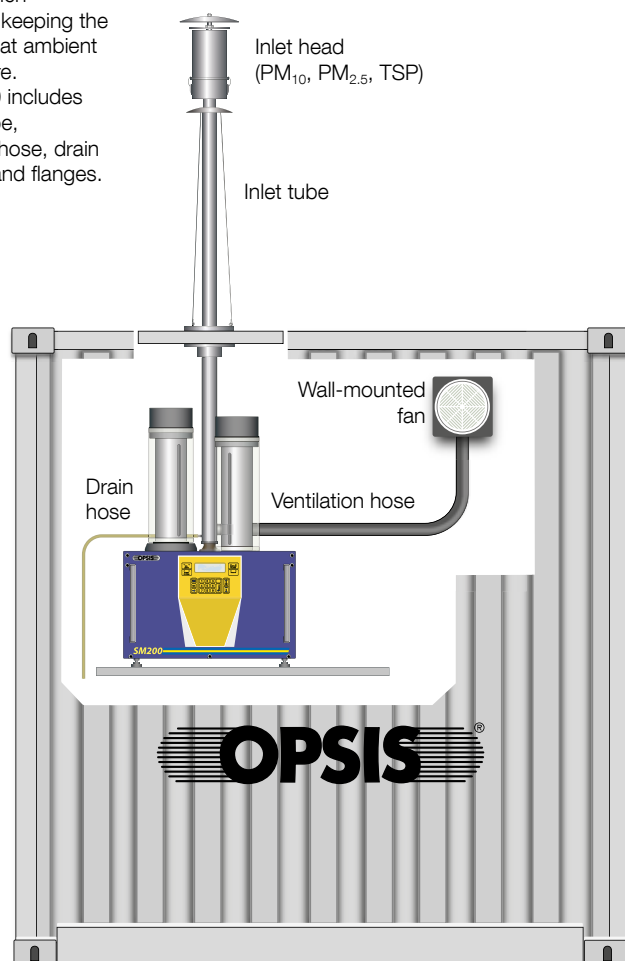

PM₁₀ inlet head



Filters and filter holder



Extra filter containers minimize maintenance and make changing of filters easy

TECHNICAL SPECIFICATIONS

Dimensions, sampling module	630 × 440 × 300 mm ⁽¹⁾
Dimensions, pumping module	310 × 280 × 250 mm ⁽¹⁾
Weight, sampling module	25 kg
Weight, pumping module	10 kg
Voltage supply	230 V/50-60 Hz
Power consumption	800 W
Display	LCD, 4 × 20 characters
Keypad	Membrane
Data storage	120 days (based on 24 h sampling)
Serial interface	3 × RS 232
Analogue output	0–10 V/0–20 mA
Digital status output	Closing relay
Degree of protection	IP 20
Operating temperature	+5°C–+40°C (+40°F–+100°F)

Performance

Operative flow rate	16.67 l/min alt. 38.33 l/min
Mass measurement range	0–1500 µg/m ³
Detection limit	0.5 µg/m ³ (24 h average), 2.3 m ³ /h
Measurement time	8–24 h, beta attenuation 1 min–24 h, particle counting

Radioactive Source Data

Source	C ¹⁴
Total activity	0.5 MBq (13 µCi)
Half life	5730 years
Type	Beta

SM200 Includes as Standard

Analyser unit 230/115 V, 1.0 m³/h/2.3 m³/h
Pump module 230 V
Beta source
2 filter containers
40 filter holders
2.5 m stainless steel inlet tube

Options (separately ordered)

Inlet head PM₁₀ at 1.0 m³/h (M000501)
Inlet head PM_{2.5} at 1.0 m³/h (M000502)
Inlet head PM₁₀ at 2.3 m³/h (M000512)
Inlet head PM_{2.5} at 2.3 m³/h (M000513)
Real-time particle measurements based on particle counting (RTPM)
Analyser configured as sampler (SM200-SAMP)
Analyser configured as atmospheric stability monitor (SM200-STAB)
Differential pressure measurements (M000990)
Analyser equipped with extra memory (E027146)
TS 200, temperature stabilized inlet tube (TS200)
I/O system for additional inputs and outputs (IOU020)
Pump module, 115 V (PL200-1)
Ethernet connection (E084156)

Accessories

Filter opener (A0974100)
Consumables kit (M300505)
Teflon filters, 2.0 µm, 100 filters per box (M000900)
Teflon filters, 1.0 µm, 100 filters per box (M000901)
Cellulose filters, 1.0 µm, 100 filters per box (M000905)
Glass fibre filter, 100 filters per box (M000920)
Extra filter container (M201680)

⁽¹⁾ Length × Width × Height

Particulate Monitoring

by OPSIS

A cost-effective solution for particulate matter monitoring and sampling

Real-time measurements of PM₁₀ and PM_{2.5} based on particle counting

Meets the new regulation for automatic monitoring of PM₁₀ and PM_{2.5}

Calibration only once per year

Meets the new regulation for sampling on 47 mm filters for further analysis of cadmium, nickel, PAH and other substances

Samples at ambient temperature – no need for correction factors

Certified according to EN 15267

Approved by TÜV, U.S. EPA, and Chinese EPA, and others

A17
2015 04

Please contact your OPSIS supplier to discuss your particular system requirements, including the compounds you wish to monitor. Separate product and other industrial application sheets are available. Specifications subject to change without notice.

OPSIS AB

Box 244, SE- 244 02 Furulund, Sweden

+46 46 72 25 00 • info@opsis.se • www.opsis.se